





Please read through this owners manual carefully before using your new tool. Use your tool properly and only for its intended use.

AngleCube

The iGAGING AngleCube is a precision instrument used for measuring angles in which any of its four surfaces may be utilized.

- *Zero can also be set at any angle so that the relative angle between two surfaces can be measured.*
- *The AngleCube can also measure absolute level, you can utilize it as a portable Packet level.*

Operation

1. To power on and read absolute level, push the “/...LEVEL” button ; “Level” will appear on the upper-left corner of the display.
2. To measure relative bevel, place the AngleCube on a table surface and push the “ZERO” button. Then, move the AngleCube to the second surface, the gauge will accurately measure and display the bevel angle between the two surfaces.
3. To switch back to absolute level measuring again, push and hold the “/...LEVEL” button for 3 seconds.
4. To hold the reading, push “HOLD” button, “H” will display at upper-center of the display. To disable HOLD function, push “HOLD” button again.
5. If “” signal appear on the LCD display, or the gauge would not power on, it is time to change battery. Remove the back plate with the screwdriver supplied, and insert a new standard 9V battery.
6. To power off, push “/...LEVEL” button. Or, unit will self-power-off within 3~5 minutes when not in use.

Specifications

Resolution:	0.05°
Repeatability:	0.05°
Accuracy:	±0.1°
Battery:	standard 9 volt (approximately 1 yr. use)

