




## MiniMag Height Gauge Instruction

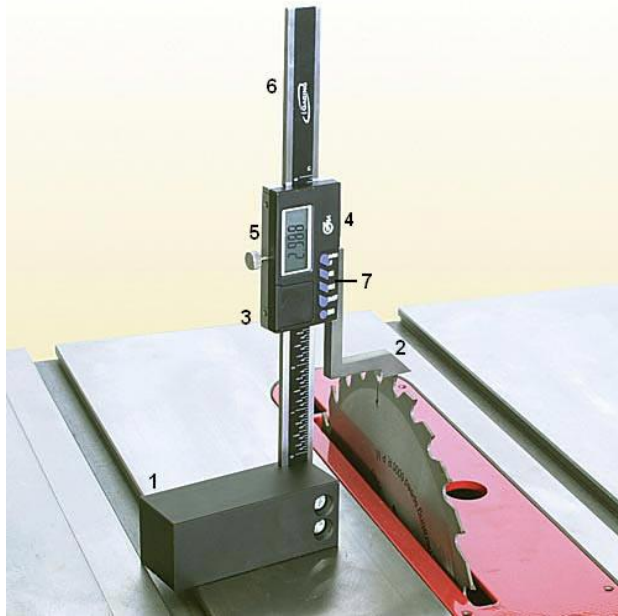

1. Base
2. Measuring scribe
3. Battery Compartment
4. SPC Data output
5. LCD Display
6. Column
7. Control Panel

### Main Technical Index

- ▶ Measuring Range: 0-6"/0-150mm
- ▶ Reading: 0.0005"/0.01mm/1/64"
- ▶ Accuracy: 0.001"
- ▶ High Measuring Speed: 120"/second
- ▶ IP54: Splash water, oil and dust resistant.

### Functions

- ▶ ON/OFF key
- ▶ in/mm/F key: metric/inch/fraction conversion
- ▶ ABS key: absolute measuring and incremental measuring. Press ABS key to get relative zero. Press the key again, back to normal measuring function.
- ▶ Hold key: Press the key, the display will not change although the processor is still operation. Press the key again to disable the function and display will show the current reading.
- ▶ Zero key: Press the key to zero setting at any position.
- ▶ SPC Data output: Connect data to computer. Purchase separately (Kit included: RS232C USB interface, cable, and software. Item# 35-777).

### Power Source

One CR2032, 3V lithium battery can provide up to one year of normal use. The display will flash when a new battery is needed.

### Notes

- Keep the tool clean
- Avoid shocks or accuracy may be affected.
- Move the tool by the base, not the column.
- For more information, please go to [www.iGaging.com](http://www.iGaging.com).